



BSA30 - Threaded

30mm Spindle ONLY
BSA30 = 68mm, 73mm

Installation

① Measure

Mesure
Messen
Misurare

② Grease


Graisse
Fetten
Grasso

③ Thread

Visser
Einschrauben
Avvitare

④ Torque

Serrer
Festziehen
Serrare

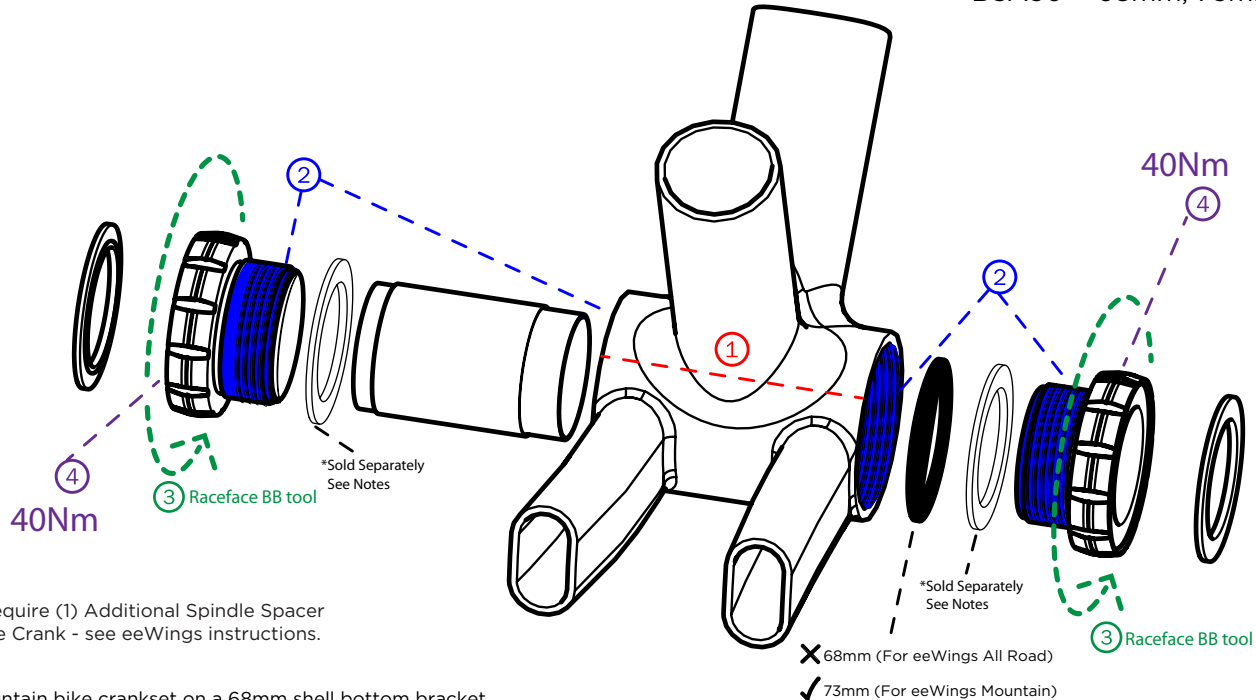

eeWings Cranksets Require (1) Additional Spindle Spacer on the Driveside of the Crank - see eeWings instructions.

*In order to use a mountain bike crankset on a 68mm shell bottom bracket, You will need to purchase a Cane Creek Spacer Kit (Part Number: BAI0110) which contains (2) aluminum 2.5mm bottom bracket spacers shown above.

AAI0104